## Adjusting the ClickLock<sup>®</sup>-lever

for ClickLock® models with included Allen-Wrench-Key and directly accessible screws, as well as all star diagonals/ prisms with ClickLock® clamps

Possibly the locking lever of the ClickLock<sup>®</sup> is in an uncomfortable position at your telescope. Then you can easily adjust it.

The screws at the bottom of the above mentioned Click-Lock<sup>®</sup> clamps and all star diagonals with ClickLock<sup>®</sup> are easily accessible. With some models, they are covered by an adapter thread, with others they are accessible even if the ClickLock<sup>®</sup> is attached to the telescope or star diagonal as shown in the image.

Simply use the included 1.3 mm Allen-Wrench-Key to loosen the screws, rotate the ClickLock<sup>®</sup> into the desired position and retighten the screws *firmly*.

## Adjusting the ClickLock<sup>®</sup>-lever

for ClickLock® models with included Allen-Wrench-Key and hidden screws (not directly accessible)

With these models, the six screws at the bottom of the ClickLock<sup>®</sup> are hidden beneath an expansion ring, which can easily be unscrewed.



Once you can access these screws, loosen them with the included 1.3 mm





Allen-Wrench-Key and rotate the ClickLock® into the preferred position.

Now retighten the screws *firmly* and reattach the adapter ring again.



